

Audi A8 (4E) Parking Brake Procedure

*** Entering Pad Thickness**

Procedure

Select

(53 Parking Brake)

(Adaptation)

In Channel enter "006"

Press (OK)

Enter the current thickness of the new pads -Between 3 - 14 mm

Press (OK)

Press (BACK) To Exit from Module

***Open Rear Parking Brake for Pad Change**

Procedure

Select

(53 Parking Brake)

(Basic Settings)

In Channel enter "005"

Press (OK)

The brake pads are now opening.

Press (OK)

Press (BACK) To Exit from Module

After fitting new pads- Change adaptation channel 006 Pad Thickness see above

***Open Rear Parking Brake for Repairs**

Procedure

Select

(53 Parking Brake)

(Basic Settings)

In Channel enter "007"

Press (OK)

The brake pads are now opening.

Press (OK)

Press (BACK) To Exit from Module

***Close Rear Parking Brake**

Procedure

Select

(53 Parking Brake)

(Basic Settings)

In Channel enter "006"

Press (OK)

The brake pads will now close

Press (OK)

Press (BACK) To Exit from Module